The default mode of the device is homekit.

HomeKit (ONLY for Apple users):

Step 1: Please open the WLAN setting page of your iPhone (as Fig. 1), find and connect the WiFi hotspot named as Homekit_xxxx. After about 3s, WiFi configuration interface will pop up automatically.

Note: If the interface doesn't pop up automatically, please open your phone browser and input http://192.168.4.1. And then, please wait for entering the interface of configuration.



Fig.1 Connect your iPhone or iPad to the new wifi network Homekit_xxxx hotspot

Step 2: Wait for the Captive Portal and select your WiFi network in the pop-up window, and insert your password and click "join" (as Fig. 2). Please make sure that the indicator always lights (the WiFi account information in the pictures is only for reference).

Note: If you don't find your router or smart plug at other states. Please

look over the Frequent Problems and reconfigure the smart socket.

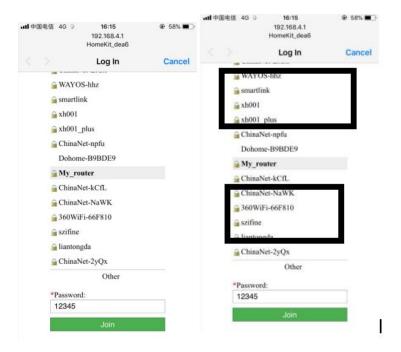


Fig. 2 Wait for the Captive Portal and select your WiFi network

Step 3: Please check if you have installed Home APP.

If not, please download it in the App Store. (as Fig. 3). If it is already installed, go to step 4.

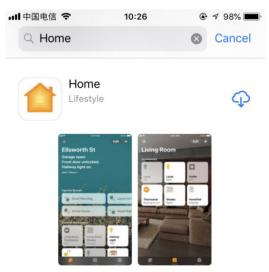


Fig. 3 Download the Home App

Step 4: Please connect your phone with your home WiFi network (as Fig. 4)

Note: Please ensure that the IPhone and the smart plug are in the same network.

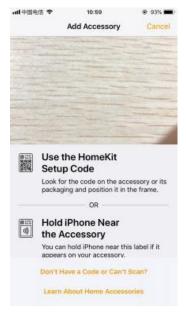



Fig. 4 Connect your phone with your home WiFi network Step 5:


- 1)Open the Home app
- 2)Click the + symbol
- 3)Click I don't have the code..
- 4) Select the Switch-xxx. When the Switch-xxx does not appear on top of the page, if you have a dual-band router, please turn off the 5GHZ Wi-Fi network and ensure that yu are using 2.4GHz Wi-Fi network.
 - 5)Confirm that you want to add the device
 - 6)Insert the Password that is 12345678
- 7) After waiting for the encryption check (about 30s-50s), you have added the switch successfully. Please rename the smart device for

convenient operation in the later, and enjoy it.





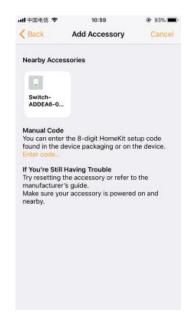

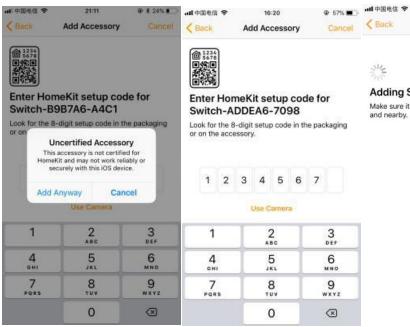

Adding Switch-ADDEA6-0AF1

11:06

Add Accessory

@ 92% **=**

Make sure it stays connected to power and nearby.

1/4

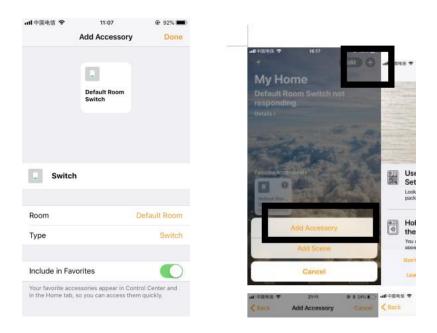


Fig. 4 How to Pair HomeKit

Step 6: if you only use the homekit function, this is all. If you use timer, remote control, Alexa, Google assistant, please download the dohome app by scanning the code




For DoHome Model:

If there is no IOS device, you need to switch the smart socket device to dohome model.

Step 1: Please power on the plug and check that the indicator light is blinking slowly (1 time every second). Long press the button of smart plug for 5s and observe that the indicator light blinks quickly (10 times every second).


Step 2: Use your phone to scan the following QR code and download DoHome APP.

Step 3: Open DoHome APP, register your account using your name and password, and then login the DoHome APP.

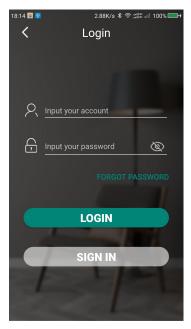

Step 4: Click the "+" in the upper right corner to add the device according to the hint.

Note: If you still have a doubt, please click the menu in the upper right corner to look for help.

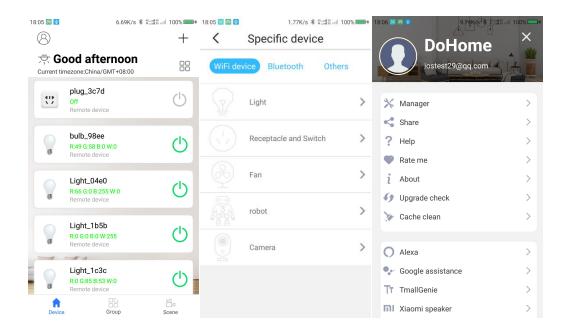

Step 5: If want to use the smart speaker, e.g., Alexa, google assistant, Tmall or Xiaomi, please click the "≡" in the upper right corner to look for the corresponding instructions.


Frequent Problems:

- Q1: How do Homekit users use timer, remote control and smart audio devices such as Alexa, Google Assistant, Tmall genie or XiaoMi audio.
- 1. Scan the QR code in the following and download DoHome APP.




2. Register and login your account information of DoHome. Pull down and refresh the interface to look for your smart device.

Note: The phone and the smart plug must be connected in the same WiFi network.

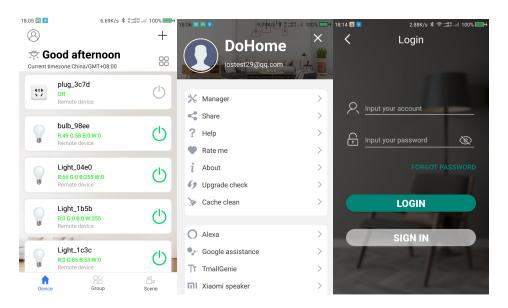

- 3. Please open the menu in the upper left corner, click "Manager" and find your device. And then, choose it and click "Bind device".
- Note: (1). You must login the 3rd platform to login your DoHome account before using it.
- (2). If you want to use the smart audio, please click the corresponding icon to check the user manual. If you need help,

please click the option of help;

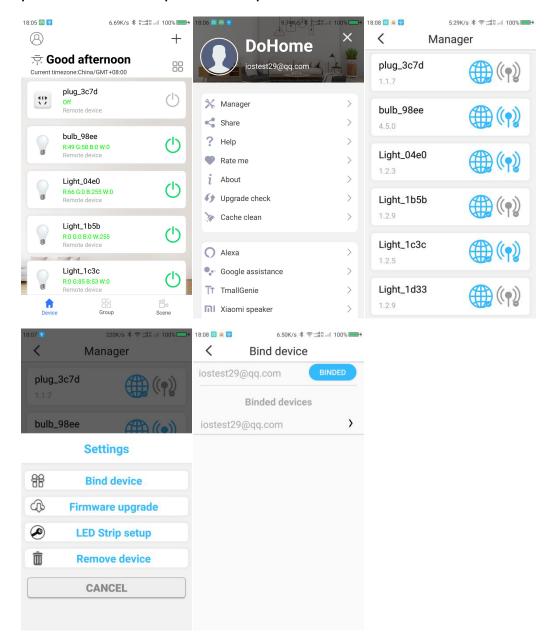

Q4: How to reset the socket to the factory mode?

A: Long press the button of the smart plug (5s) and the indicator light will blink slowly.